

CCKEYS

Key Management Solutions

Changing “Push-Button” Lock Codes

Special Note:

When code changes have been completed, code/lock operation should be tested at least twice before the door is closed. Making sure the catch operates correctly.

Numbers and/or letters can only be used **once** in any code.
The 'C' button **must be** held down whilst the tumblers are being re-positioned.

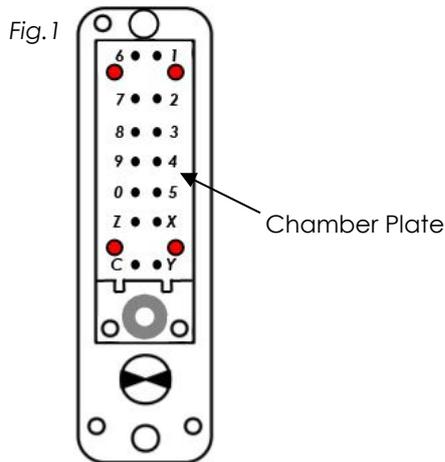



Fig. 2
Red-Tipped Tumbler
(Coded Buttons)



Fig. 3
Blue-Tipped Tumbler
(Un-Coded Buttons)



1. Hold the lock in the palm of your hand, lock buttons facing downwards, with your thumb pressing on the chamber plate at the back of the lock.
2. Remove the 4-red cross-head screws and carefully lift off your thumb from the chamber plate, making sure that the 14 springs are not disturbed.
3. With the 'C' button firmly depressed, use a small pair of pliers to carefully re-position the tumblers (as per diagrams) so that the **red-tipped tumblers** correspond with the new code that you have chosen.

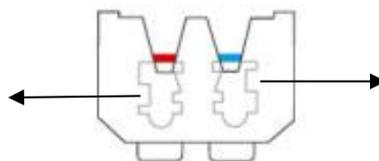

4. This completed, replace the chamber plate, making sure that the 14 conical springs are still seated correctly. Replace the 4-red cross-head screws to secure.

Any concerns please contact us via:

Lightning Works, Birmingham Road, Hopwood, Birmingham, B48 7AL
+44 (0)121 445 4551
info@cckey.co.uk

