


Changing "Push-Button" Lock Codes

These are the most important points to watch when changing lock codes.


- ◇ All codes begin with the letter 'C', which cancels any previous settings and does nothing else. **It cannot be changed.**
- ◇ Numbers and/or letters must only be used once in any particular code.
- ◇ To avoid internal lock damage, the 'C' button must be held down whilst the tumblers are being swapped around.
- ◇ The squared (single) notches of all tumblers must always face **OUTWARDS**, with the coloured tips uppermost - as in the diagrams.

CODED TUMBLER
(With RED tip)

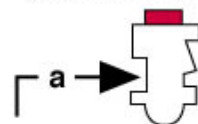


Square notch cut
in lower position

NON-CODED TUMBLER
(With BLUE tip)

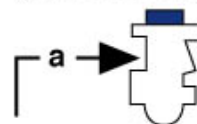

Square notch cut
in upper position

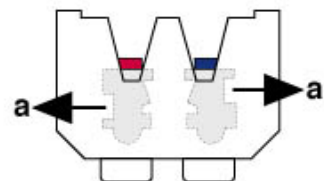

Section through lockcase
showing square notches in
tumblers facing outwards

To Change a Code

1. Hold the lock in the palm of the hand, lock buttons facing downwards, with the thumb pressing on the chamber plate on the back of the lock.
2. Remove the 2/4 red cross-head screws and carefully lift off the chamber plate, making sure that 14 conical springs are not disturbed.
3. With the 'C' button firmly depressed, use a small pair of pointed pliers to re-position the tumblers (correctly, as per diagrams) so that they correspond with the new code that you have chosen. **The red-tipped tumblers should now represent that code.**
4. This completed, replace the chamber plate, making sure that the 14 conical springs are still seated correctly.
5. Replace the 2/4 red cross-head screws to secure

Special Note:

When code changes have been completed, code/lock operation should be tested at least twice before the locks are refitted to the door. This precaution prevents a door being fitted with an incorrectly-assembled lock which will still allow it to close and lock as normal, but **WILL NOT UNLOCK.**



Credit Card Keys

...the key to your success!!

291 Sovereign Road
Kings Norton
Birmingham B30 3HB

Tel: 0121 451 3911
Fax: 0121 451 3133